
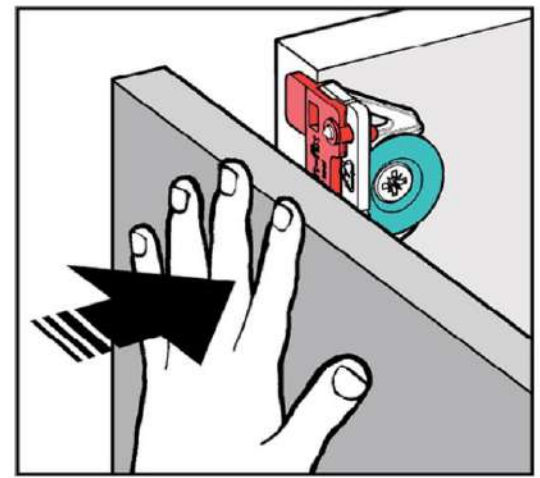
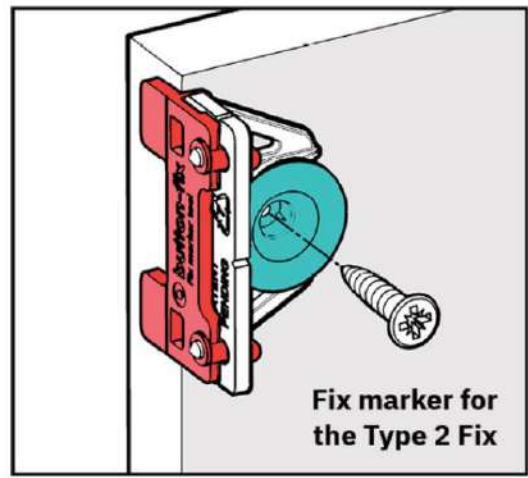
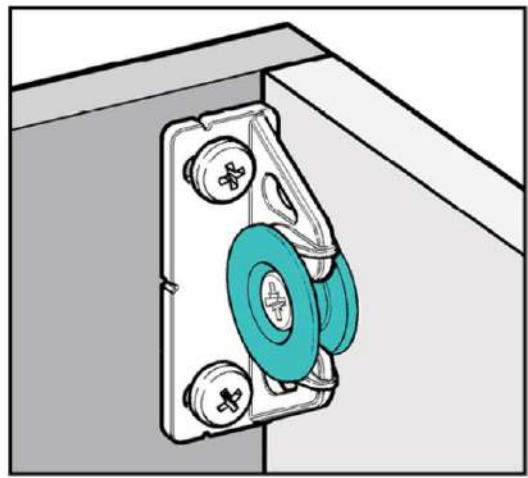


Instructions for Button-fix Type 2

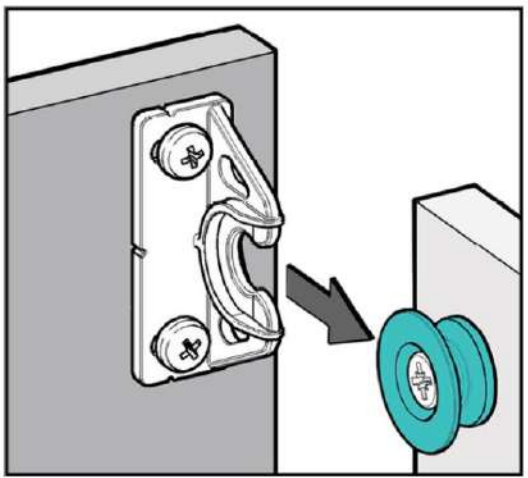

The Type 2 Fix is mounted to the back of the removable panel and the Type 2 Button to the side panel or supporting frame. The Fix Marker accessory makes sure the Button and Fix are correctly aligned.